
 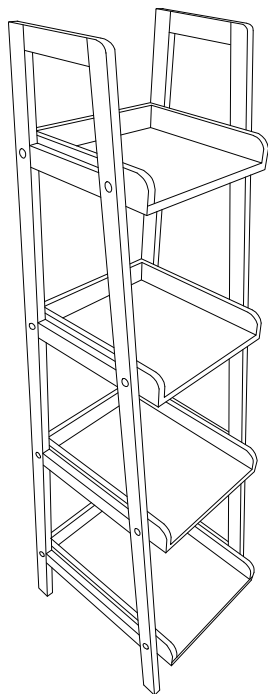



WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.

ASSEMBLY INSTRUCTION


FZ0010011




	aX16PCS		bX1PC
---	----------------	---	--------------




Scanning the QR code to open assembly instructions.

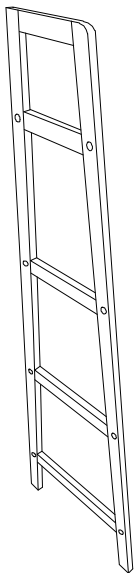


A X1PC

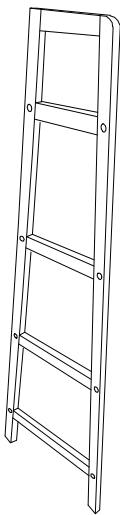


B X1PC

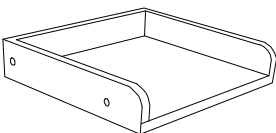


C X1PC

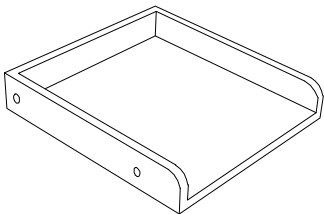

D X1PC

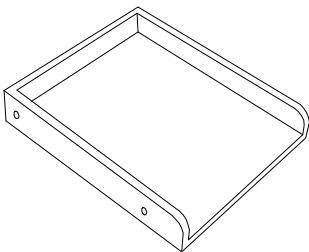

E X1PC

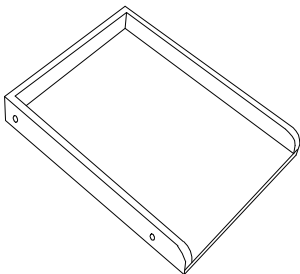

F X1PC



SAFETY INSTRUCTION

WARNING

Children have died from furniture tipover.




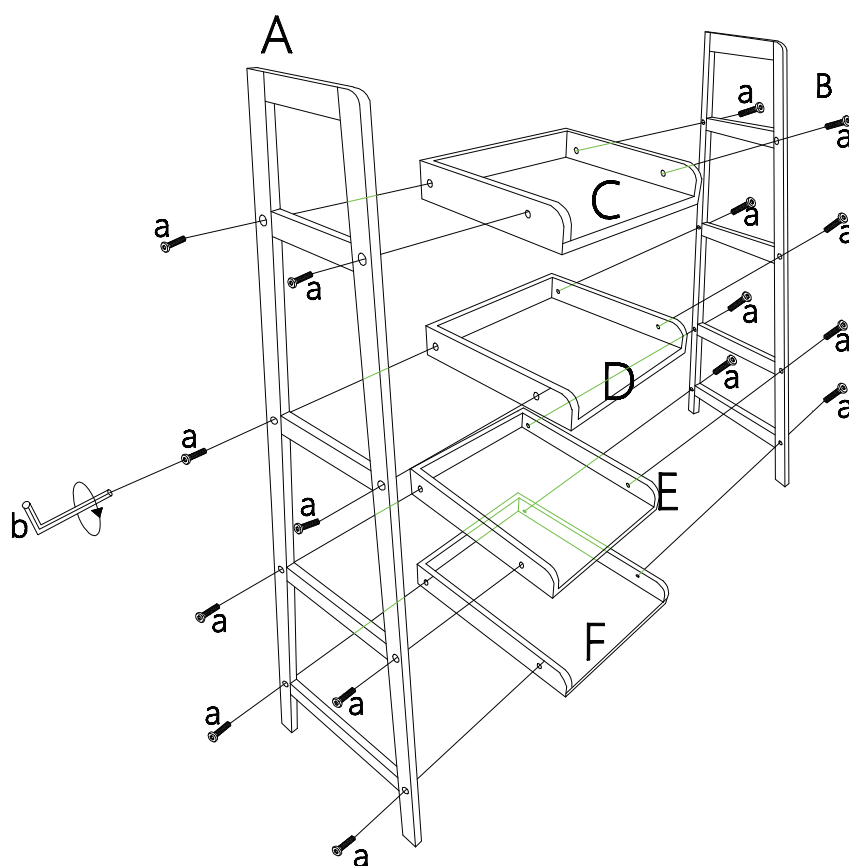
- (a) always secure this furniture with an anchor device;
- (b) never allow children to stand, climb or hang on drawers, doors, or shelves;
- (c) never open more than one drawer at a time;
- (d) place heavy items down low;
- (e) never place a television on this furniture.

ASSEMBLY INSTRUCTION

FZ0010011

Step 1

 a X16PCS



Step 2

