


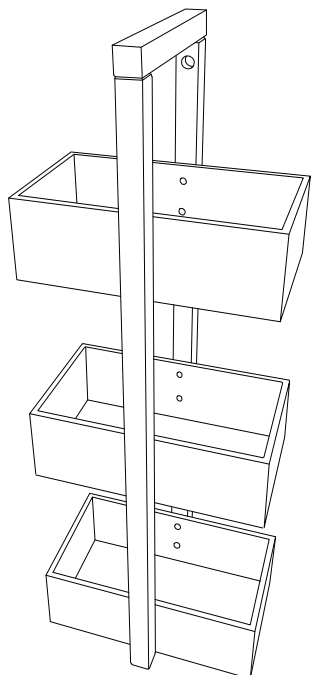



WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.

ASSEMBLY INSTRUCTION

 FZ0010012



 a X12PCS	 bX1PC
 CX2PCS	 dX2PCS




 Scanning the QR code to open assembly instructions.



A X1PC



B X2PCS

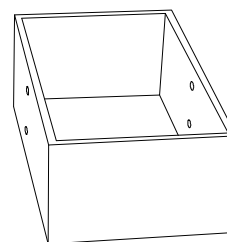


C X3PCS

ASSEMBLY INSTRUCTION

FZ0010012


Step 1

 a X12PCS

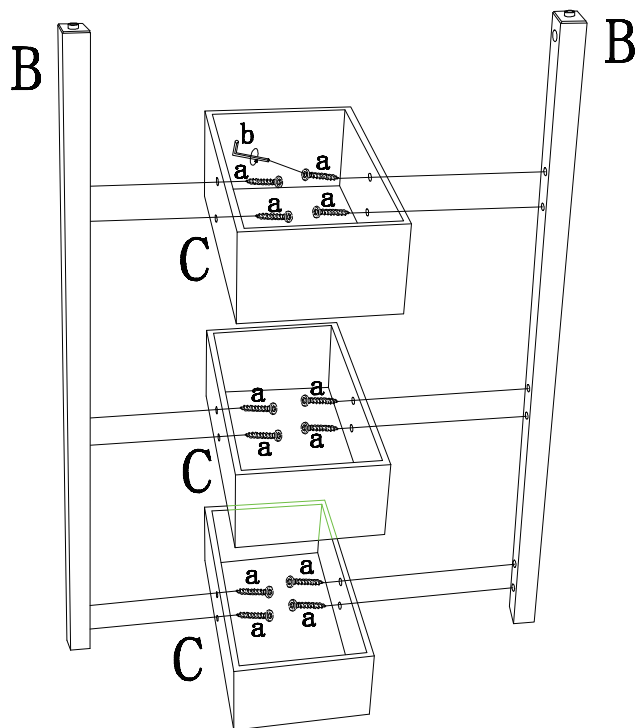


Step 2

 C X2PCS

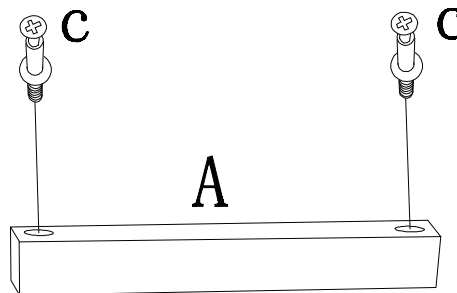

Step 3

 d X2PCS

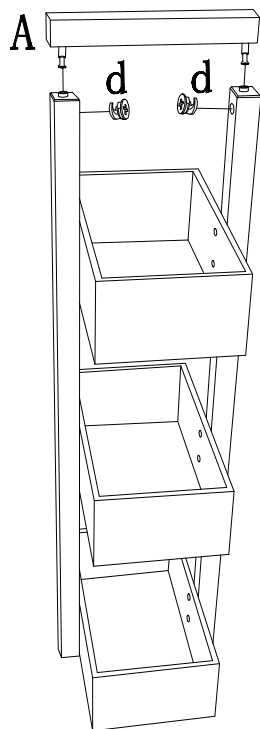

Step 4

