# Assembly Instructions

### WARNING!!

### Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.

Please look in the brown box for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.

Children like to climb on furniture and Unsecured furniture can pose a serious danger.

Please follow all instructions and install the tip-over restraints provided


In addition to installing the restraints, to help prevent tip-over:

1. Place heaviest items on the lowest shelves,

2. Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product,

3. Never allow children to climb or hang on sides or shelves,

4. Do not assemble on a rough or uneven surface.

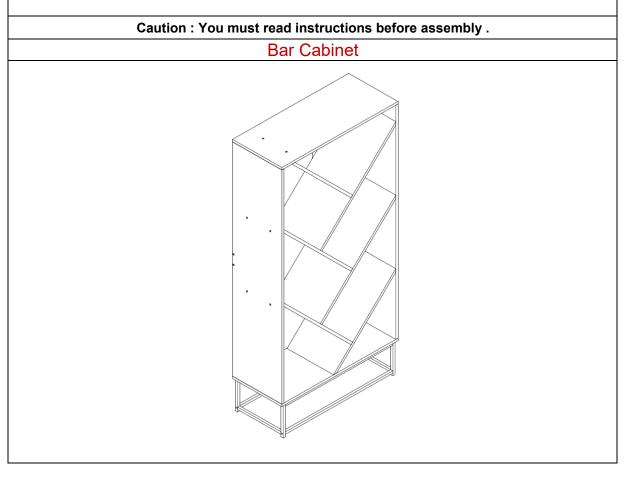



# WARNING Children have died from furniture tipover.



- (a) always secure this furniture with an anchor device;
- (b) never allow children to stand, climb or hang on drawers, doors, or shelves;
- (c) never open more than one drawer at a time;
- (d) place heavy items down low;
- (e) never place a television on this furniture.

# **USER MANUAL**

Thank you for choosing our product. We hope you will find the instructions on this user manual clear and easy to follow. If you take a few minutes to look through it, you'll learn how to assemble and use of your new unit for maximum enjoyment.

This User Manual will provide basic instructions and safety guide for this products. After you have finished reading the instructions, please keep this manual in a safe place for future reference.

Should you ever experience a problem with of any our products, please fell free to contact us.



### FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATING INSTRUCTION AND WARNING REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS INJURY.

The safety of our clients and users is our primary concern. To enssure safe operation, please read this instruction carefully.

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we strongly recommend securing all furniture to a wall using the anti-topple wall bracket supplied.


We have provided the fittings for attaching the wall bracket to the unit, but due to the different types of walls you might have, we not provided the fitting for attaching the bracket to your wall. You should first identify the type of wall you intent to fix the product to and then contact your local hardware store to get the appropriate fixings.

When attaching to walls always consider the position of any electrical cables or water pipes nearby.




# WARNING


### FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

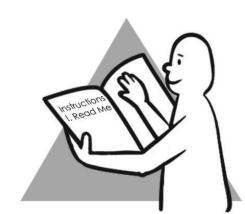


Read Instructions carefully. Check no parts are missing.

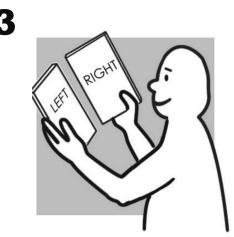

Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

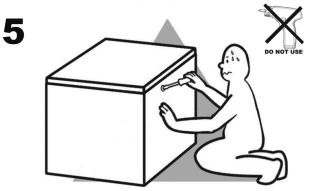


**DO NOT** fully tighten screws leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

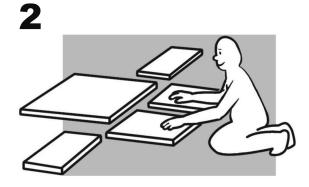

Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.



Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

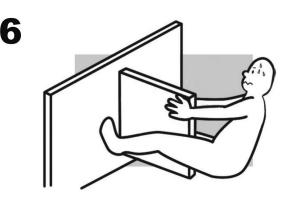

If glue is required DO NOT set until you are certain that the parts belong together.



# Safety and Care Advice

### Important – Please read these instruction fully before starting assembly

Check you have all the components and tools listed are included.

Remove all fittings from plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke it swallowed.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the products, this could cause damaged.

Assemble the item as close to its final position (in same room) as possible.

Do not place furniture direct in front of radiators, fires or any other source of heat.

Assemble on soft level surface to avoid damaging the unir or your floor.



We do not recommend The use of power drill/ drivers for inserting screws, as this could damage the unit.



Parts of assembly will be easier with 2 people.

Dispose of all packing carefully and responsibly.

### **General Care And Maintenance**

To ensure that you receive maximum pleasure from your new furniture, it is very important foryou to care your products.

Maintain the furniture on a regular basis and in accordance with the instructions

Take care to prevent sharp object and avoid contact with chemicals e.g. cosmetics or hair products which may permanently mark the surface,

From time to time check that all the fitting are tlight on this piece of furniture.

Always use coasters to protect surface from moisture and heat.

Take care when moving furnituredragging pieces across the floor will damage the joints.

Avoid exposing your furniture to direct and prolonged periods of sunlight and heat sources as fading and cracking may occur.

### **Cleaning And Care Of Products**

Dust regularly with a clean dry cloth.

Wipe up any spills immediately with a damp cloth and then dry the surface with a clean dry duster.

Remove stubborn stains with weak washing up liquid solution and a damp cloth and dry with a clean dusters.

Do NOT use abrasive cleaners.

Do NOT clean with the following or products containing the following:

Acetone(eg nail vanish remover), Ammonia (eg bleach) or Sodium hydroxide(eg Caustic soda, drain and oven cleaners). In the events of accidental contact rinse thoroughly with water

### **General Information**

 
If for any reason you should have problems with your products, Please retain your receipt as proof of purchase and contact the store from which you purchased it.



### A Guide to – Wall Mounting & Fixings

### **Important Notes:**

### Wall Fixings:

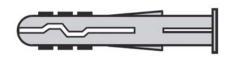

- because of the variety of different wall types, we have provided kind but may not exact fixings you will need to fix this product to the wall.

In this case, you must first identify the type of wall you intend to fix product onto and then contact your local hardware store to get the appropriate fixings. **Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

### Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

 
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.

4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.


### Types of walls

### No.1 'General Purpose' wall plug

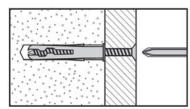

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.4 'Plasterboard' wall plug

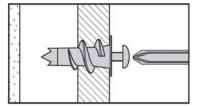 

For use when attaching light loads on to plasterboard partitions.

### are mad of brick, breeze block, concrete, stones or wood.

 
You can use one of the following types of wall plug if your wall

# 

No.2 'Cavity Fixing' wall plug


For use with plasterboard partitions or hollow wooden doors.

#### No.5 'Cavity Fixing-Heavy Duty' wall plug

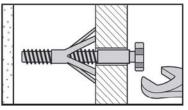


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.3 'Hammerfixing wall plug

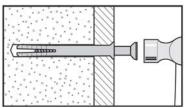 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the

### No.6 'Shield Anchor' wall plug Heavy loads

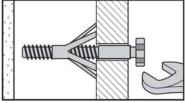 



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.





Parts List				
Label	Picture	Description	QTY	
А	•	Left Side Panel	1	
В		Right Side Panel	1	
С		Top Panel	1	
D		Bottom Panel	1	
E		Back Slat	1	
F		Shelf 1	2	
G	• .	Shelf 2	2	
н		Shelf 3	1	
I		Shelf 4	1	
J		Support Block	6	
к	R	Back Panel	1	
L		Metal Leg Frame	2	
м		Upper Metal Rod	2	
N		Lower Metal Rod	2	


Label	Picture	Description	QTY
1	82 DDW	Cam Bolt	5
2	and the second s	Cam Lock (ø 15x12mm)	5
3	· Opping	Bolt (M6x30mm)	9
(4)		Screw (M4x12mm)	3
5	0	Wall Bracket	2
6	1	Wood Screw (M4x25mm)	13
7	-	Wood Screw (M4x35mm)	15
8	-	Wood Screw (M4x45mm)	21
9	Daman	Bolt (M6x40mm)	9
10	Ø	Spring Washer (M10)	9
11	0	Washer (M12)	9
12	and the second sec	Wall Anchor	2
(3)		Allen Wrench	1
(4)	$\bigcirc$	Screw Cover	31
(15)	Ø	Wooden Dowel	19

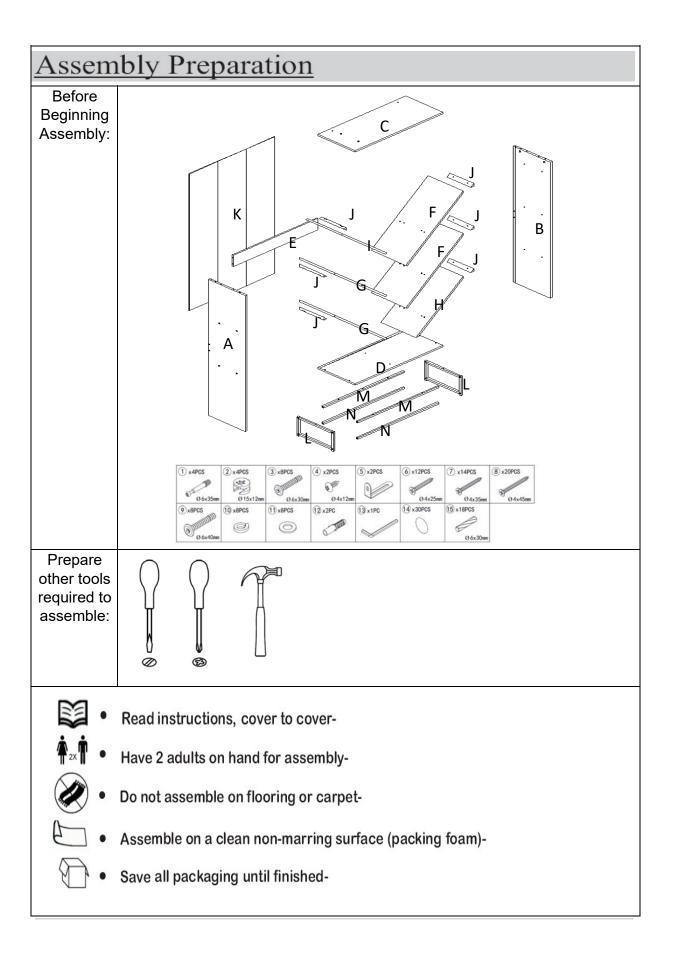

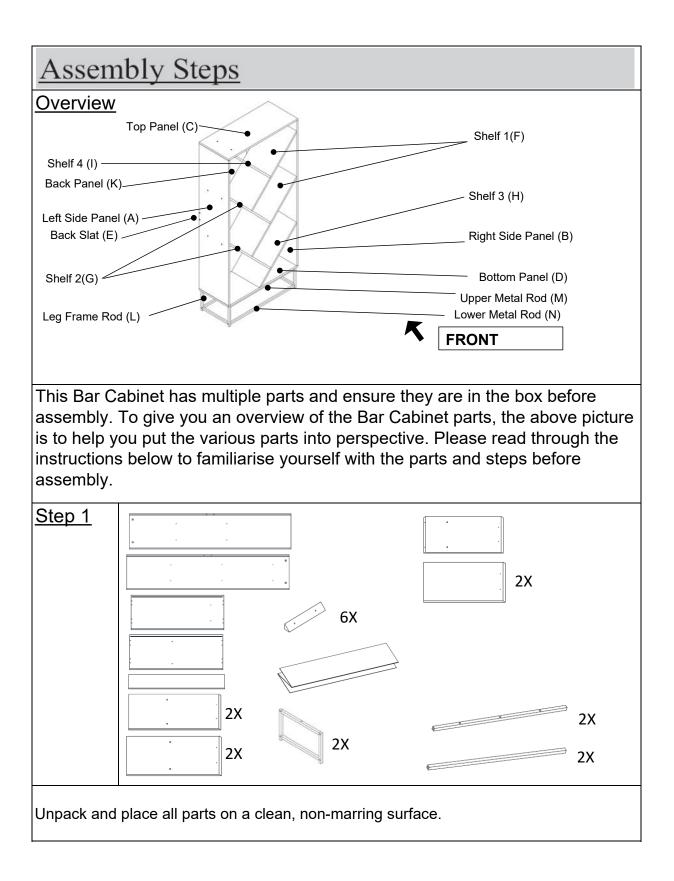

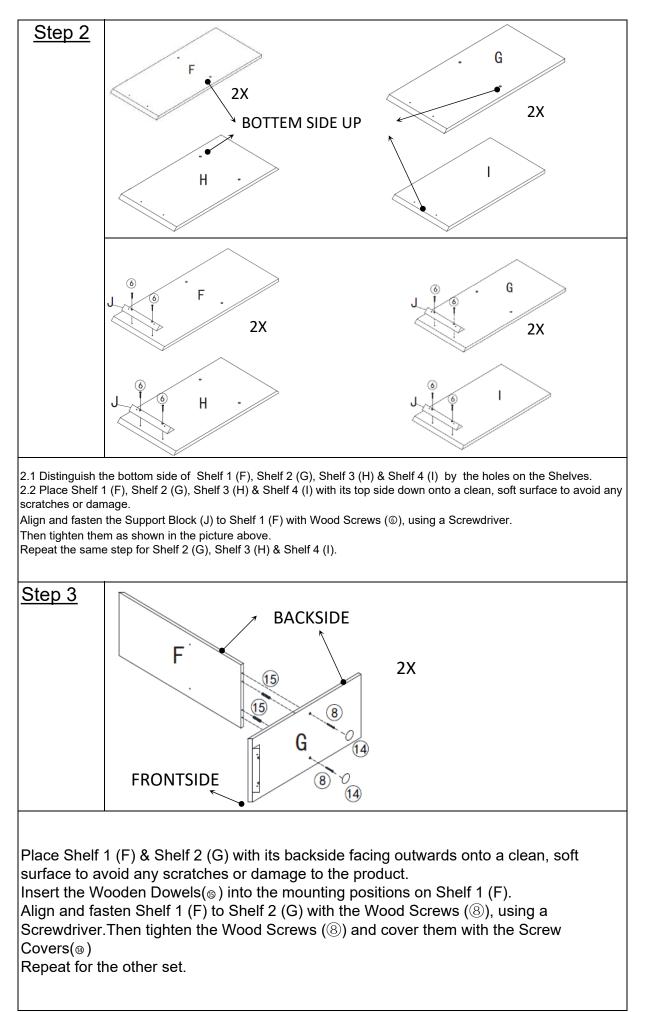


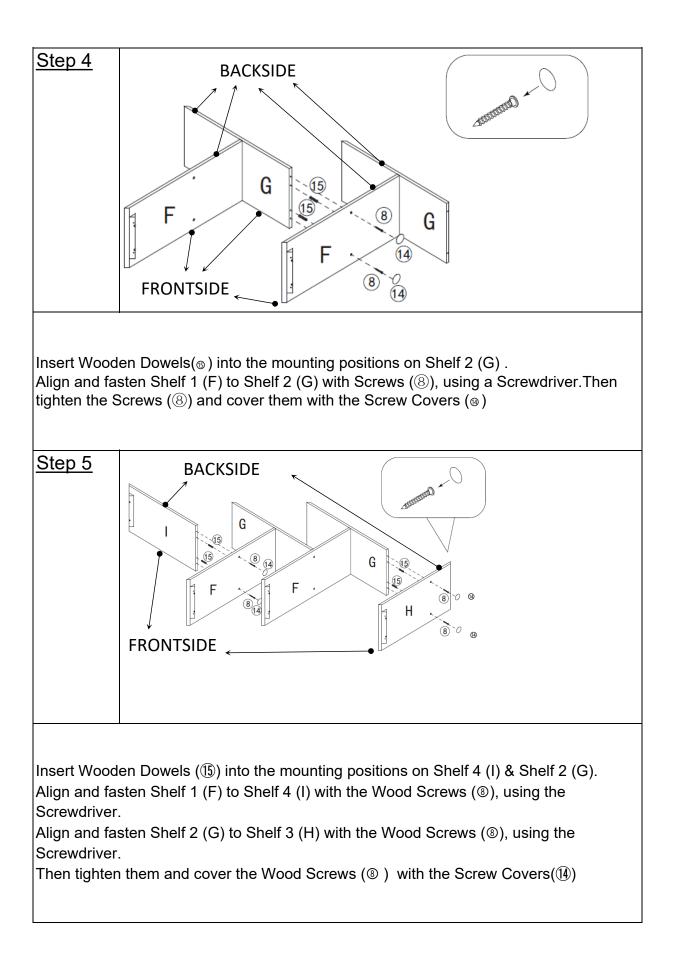

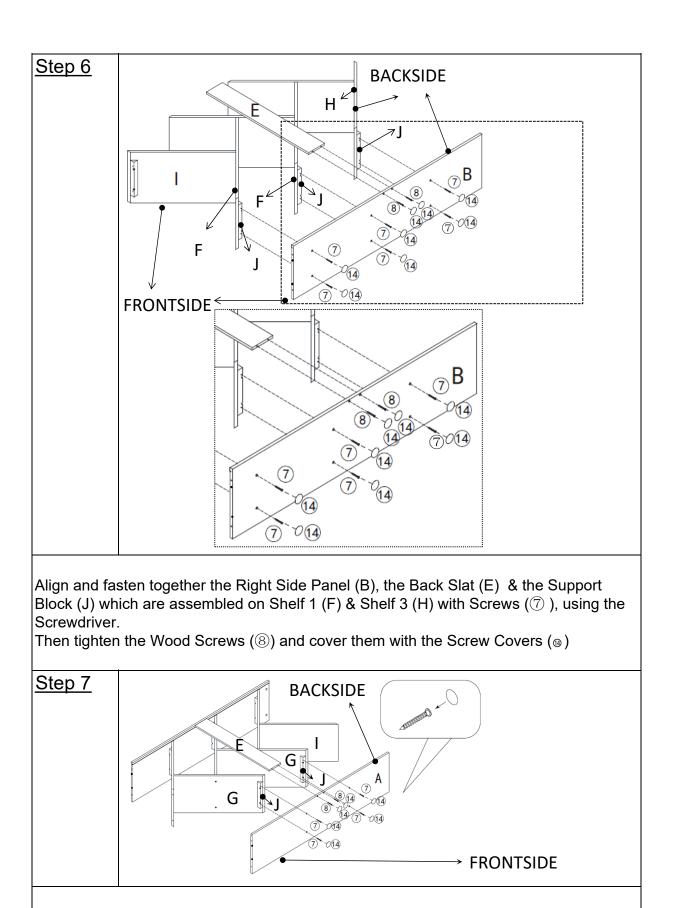

Go to the other side.


Align and fasten the Left Side Panel (A), the Back Slat (E) & the Support Block (J) which are assembled on Shelf 2 (G) with Screws ( $\bigcirc$ ), using the Screwdriver. Then tighten the Wood Screws (B) and cover them with the Screw Covers(B)

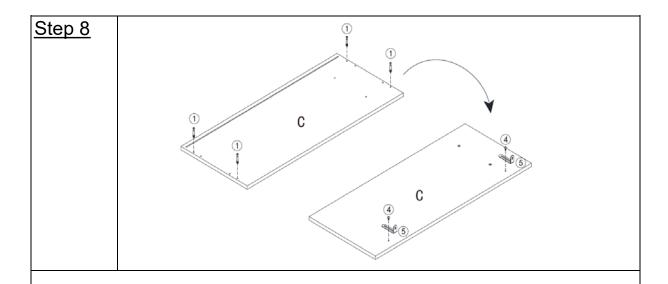

Place the Top Panel (C) with its one side facing outwards onto a clean, soft surface to avoid any scratches or damage.

Screw the Cam Bolt (1) into the mounting position on the Top Panel (C) as shown in picture above.


Turn over the Top Panel (C). Align and fix the Wall Bracket((5)) onto the mounting positon on the Top panel (C) with the Wood Screws((4)) as shown in the picture above.

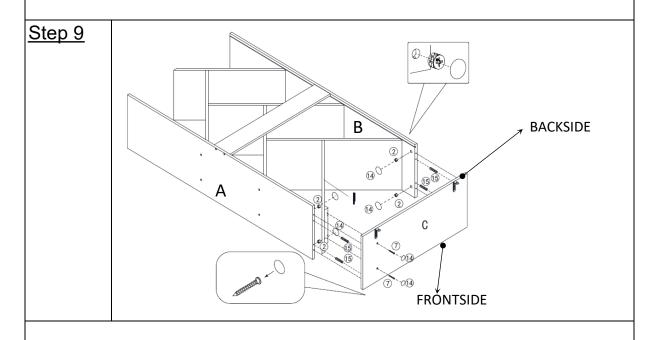


Insert the Cam Locks (②) & Wooden Dowels (③) into the mounting positions on the Left Side Panel(A) & the Right Side Panel(B) as shown in the picture above.

Align and fasten the Top Panel (C) into the mounting positions on the Left Side Panel(A) & the Right Side Panel(B) as shown in picture above.

Align and affix Shelf 4 (I) to the Top Panel(C) with Screws  $(\bigcirc)$ . Tighten the Screws $(\bigcirc)$  then cover them & the Cam Locks (2) with the Screw Covers(0)

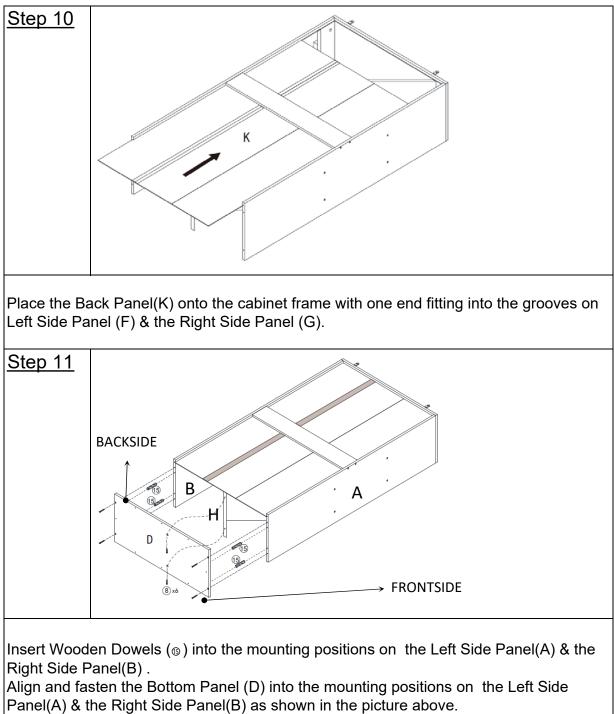


Align and affix Shelf 3 (H) to the Bottom Panel(D) with the Wood Screws(⑧).Then tighten them.

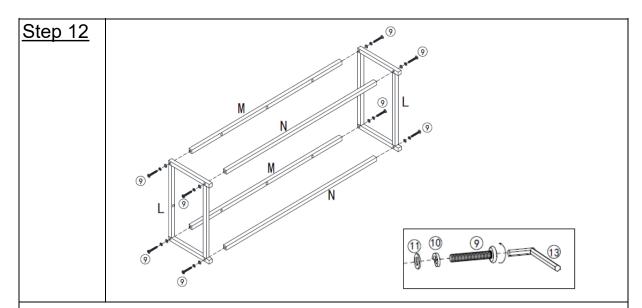


Put the Spring Washers(<sup>(®)</sup>) and the Washers (<sup>(®)</sup>) onto the Bolts(<sup>(®)</sup>) as shown in the detailed picture above.

Align and fasten the Upper Metal Rods (M) & the Lower Metal Rods (N) into the mounting positions on the Metal Leg Frames (L) with the Bolt set (③) as shown in the picture above.

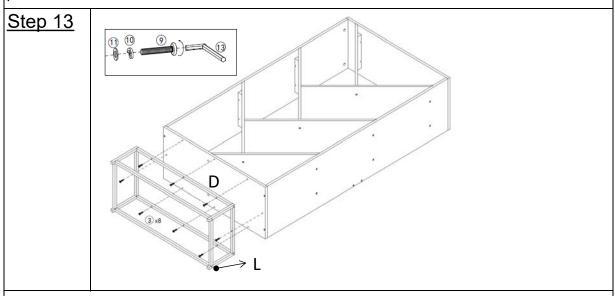

Turn over the cabinet.

Align and fasten the metal Leg Frame(L) into the mounting positions on the Bottom Panel (D) with the Bolts(③) as shown in the picture above.

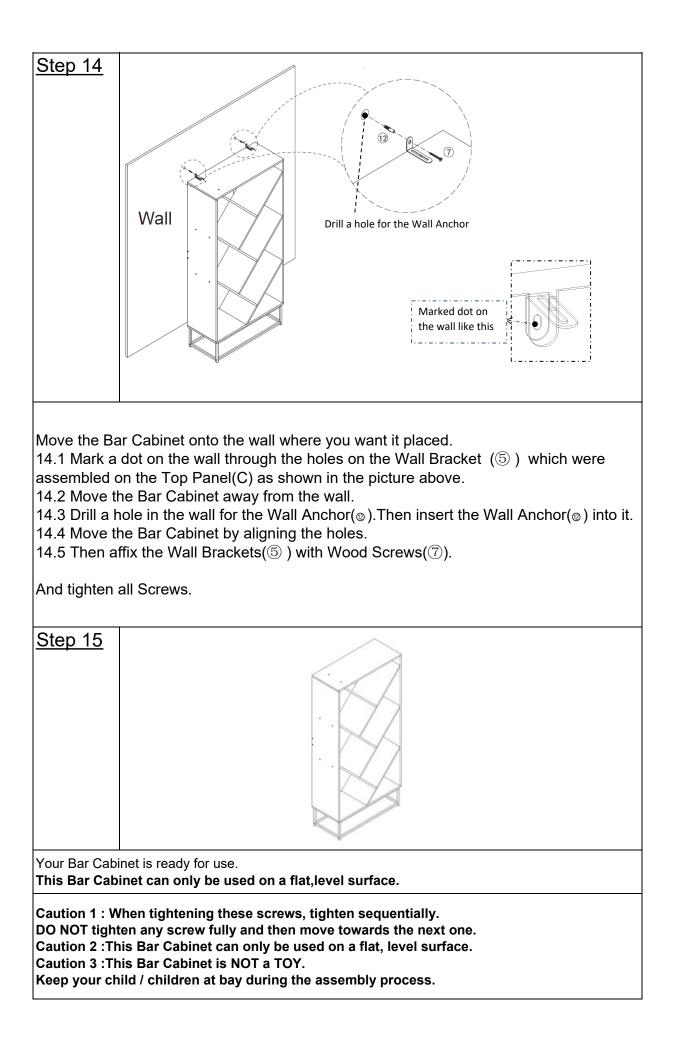

Care & Maintenance				
✓ Fill	• Furniture may scratch floors. We recommend using furniture pads to protect your floors.			
0	• Do not put hot items directly on furniture surface.			
	• Do not clean furniture with harsh cleansers or polish.			
ØÖ	Do not place furniture under direct sunlight.			
0	Do not place furniture near heating or cooling vents.			
0 L	• Do not write on furniture without a padded barrier to protect the surface.			
Ø 🔶	Do not place furniture outside . For indoor use only.			
0	Not for commercial use. For residential use only.			
	• Stains may be removed with mild soap solution and damp cloth.			
0 ¥	Children should not climb or jump on the furniture.			
1	• Dust and pick-up spills using a clean, non-colored,lint-free cloth.			