
WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall bracket with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

## ASSEMBLY INSTRUCTION

FZ0080043 V1 1) x58PCS (2) x40PCS (3) x24PCS (4) x18PCS (5) x72PCS ׿ Ø 15x10mm Ø 15x12mm Ø4x35mm Ø4x10mm (6) x54PCS 9 x2PCS 10 x6PCS (7) x2PCS 8 x2PCS Orgent . Ø 4x12mm Ø6x30mm (15) x32PCS (11) x6PCS (12) x6PCS (13) x6PCS (14) x6PCS (18) x2PCS 16) x6PCS (17) x3PCS **DAMANA** Ø4x30mm  $\emptyset 4x45mm$  $\emptyset$  6x50mm


Scanning the QR code to open assembly instructions.

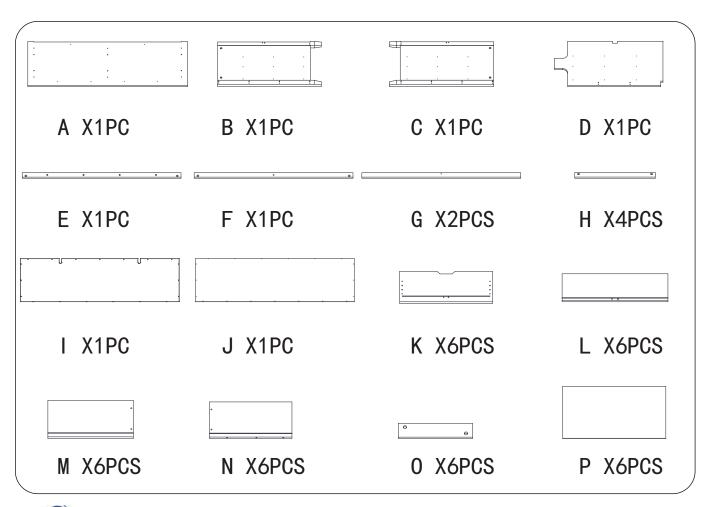



hello pM

Tel: 02 8678 8554


Email: support@helloapm.com.au

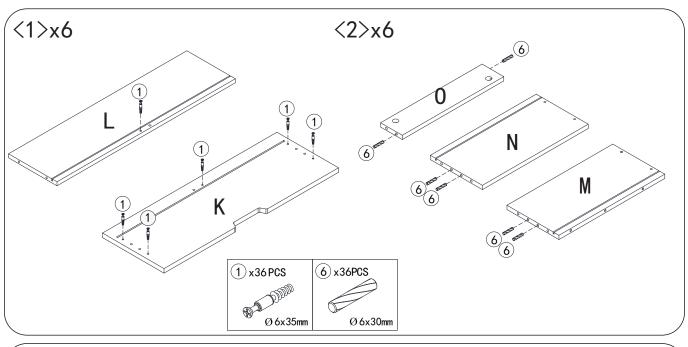


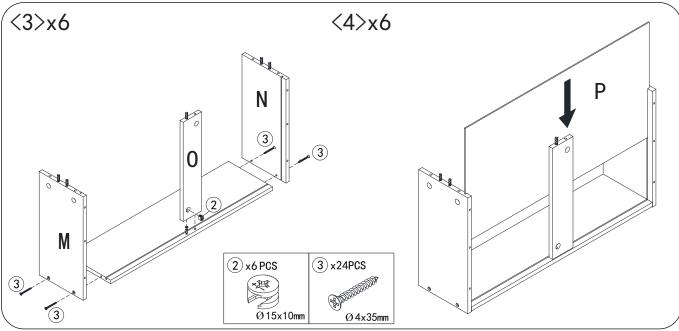

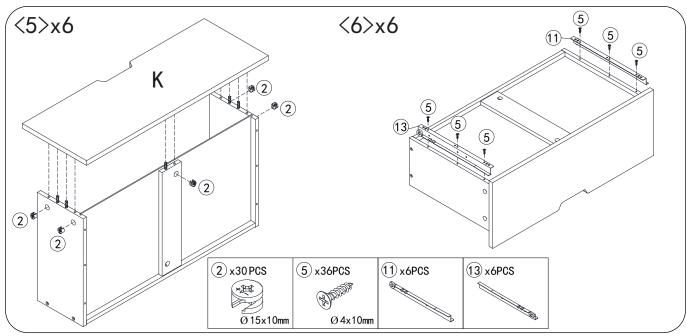


hell@pM

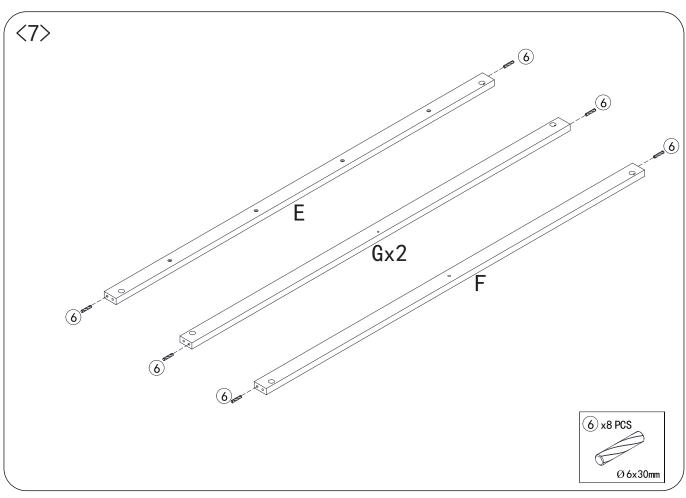


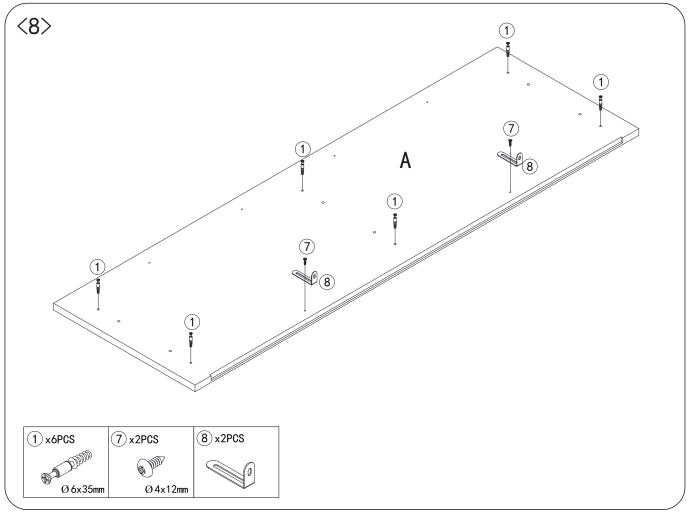




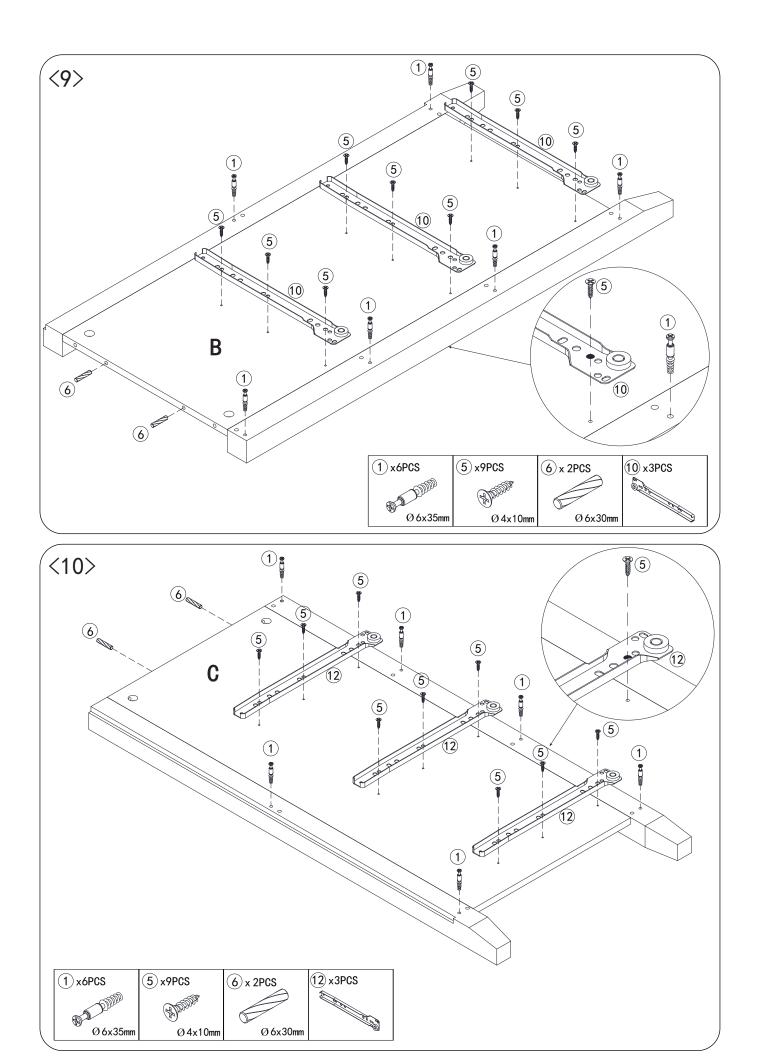





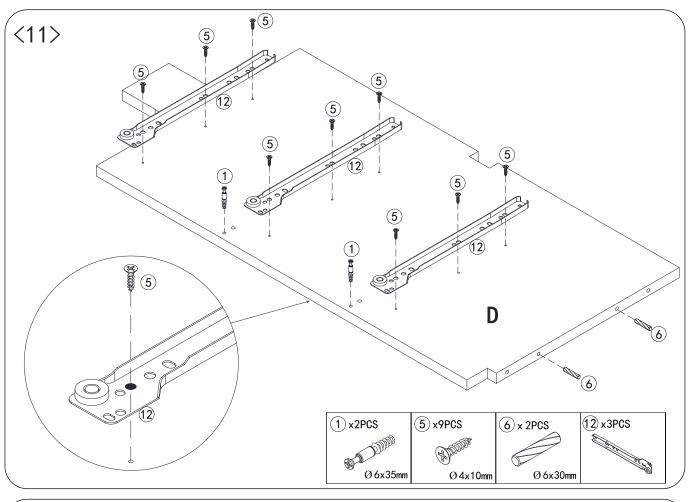

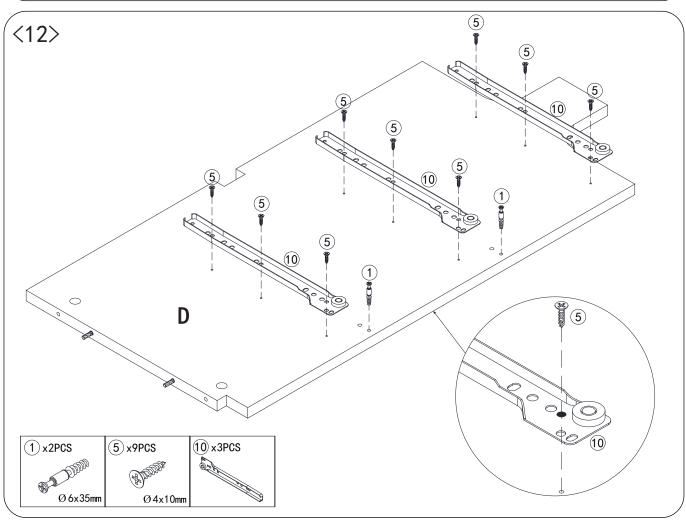



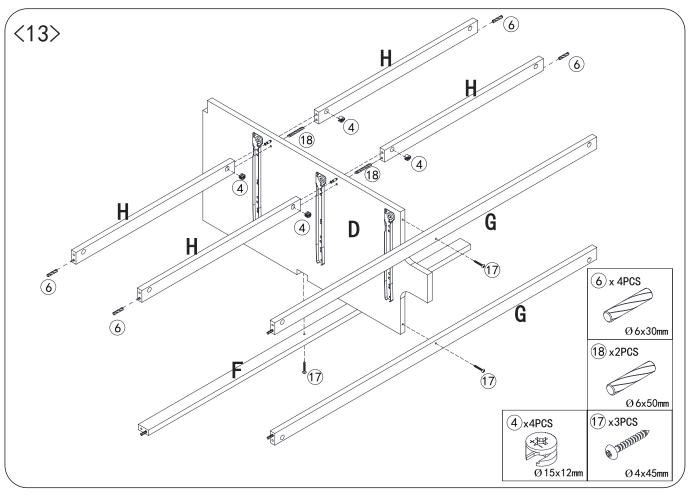

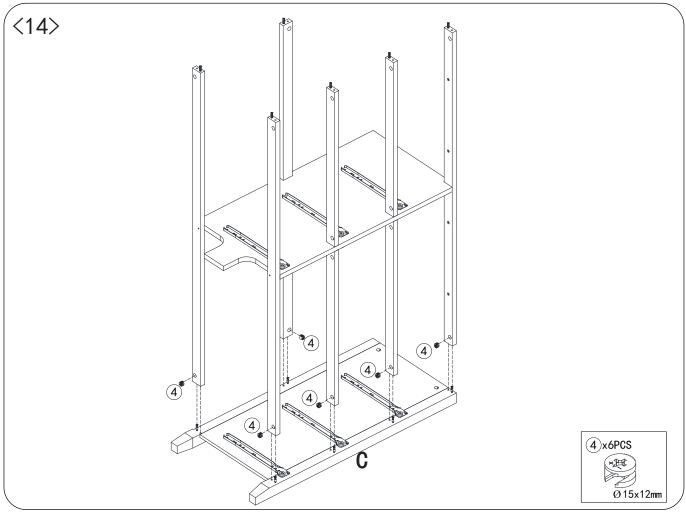

hell@pM

